
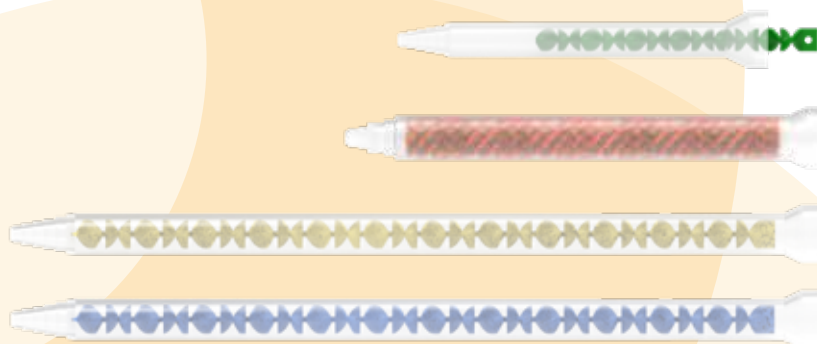


# Statomix™ Machine Mixers

EFFICIENT AND RELIABLE

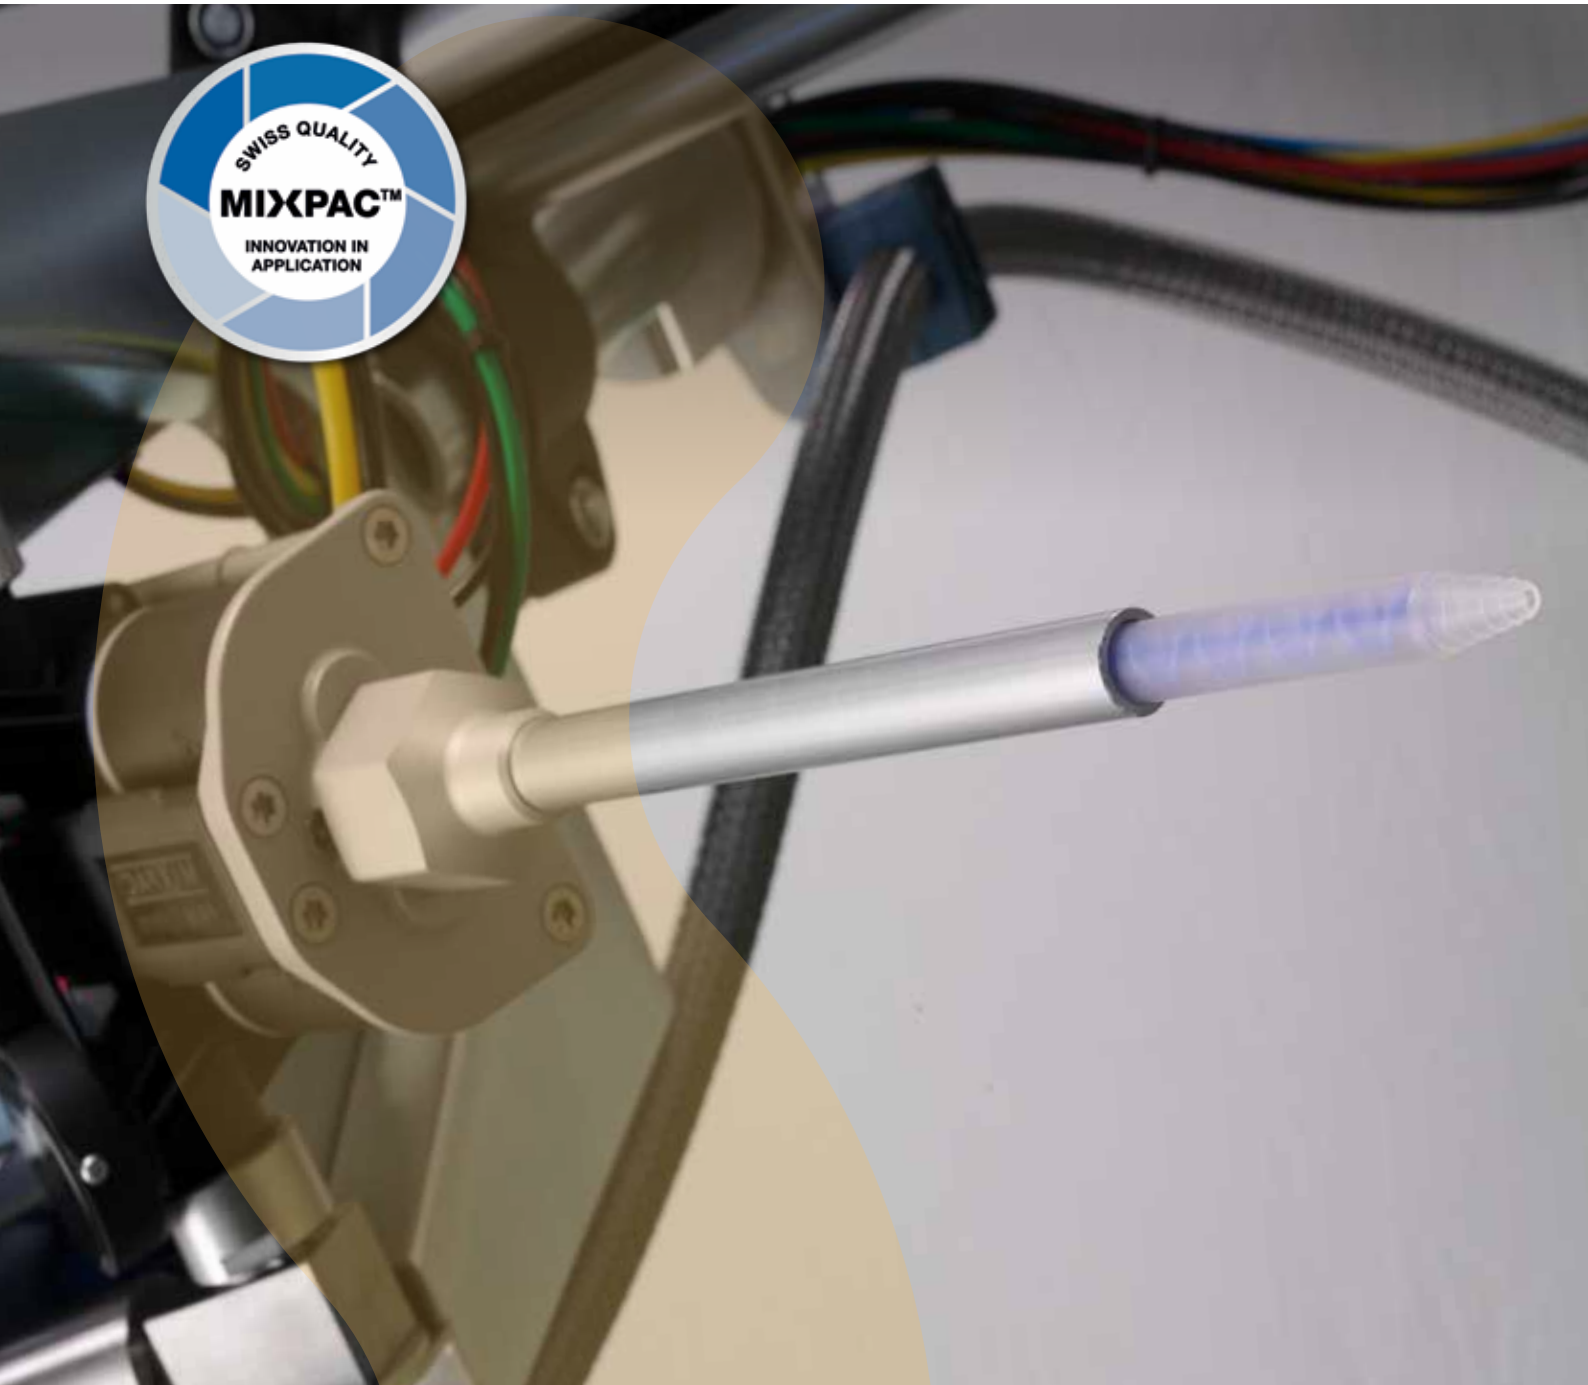

 medmix

INDUSTRY





STATOMIX MP SERIES


# STATIC MIXERS WITH X-GRID™ TECHNOLOGY

MIXPAC Statomix MP series provides excellent performance for difficult to mix materials by using the X-Grid technology.

- Designed especially for two-component products which have high viscosity ratios
- Optimal for mixing materials filled with particles, e.g., heat-conducting paste
- Up to 3 times shorter than helical mixers
- Minimal material loss due to highly efficient mixing process
- Avoids unmixed zones near the housing

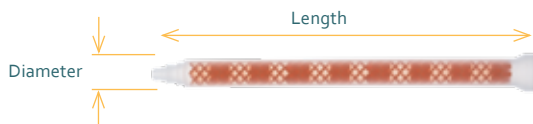
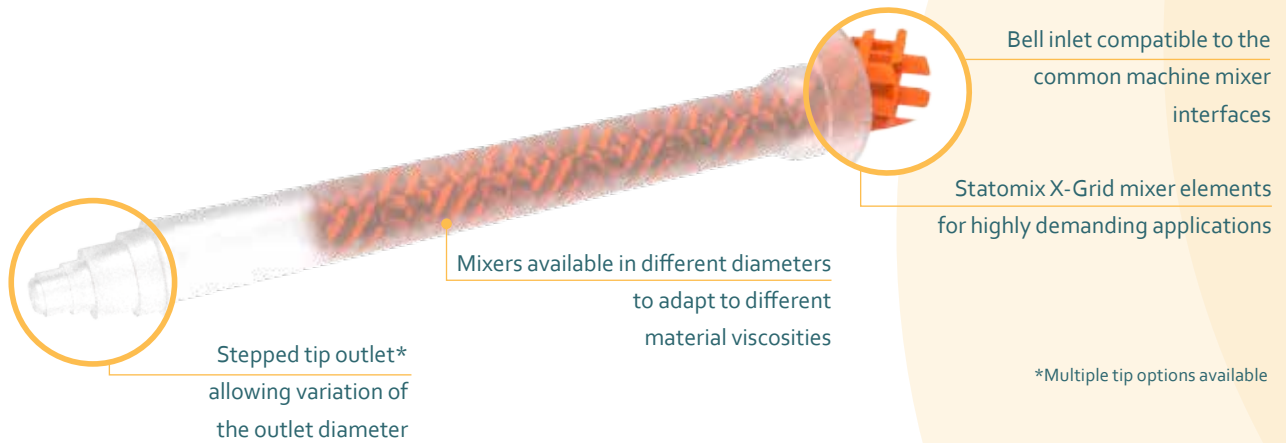


Example shown: MPH 12-16-T-01 with bell inlet

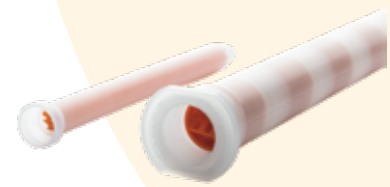

Bell inlet on MPH

Flange type with optional thread MPF 21-xx

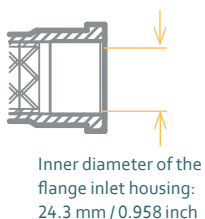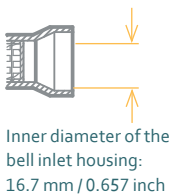

ID	Article		Diameter mm	Length mm	Waste Volume (mL)	Inlet Type	Outlet Tip**	Element color	Element material
167879	MPP 9-20T-01	20	12.5	235	12.5	Bell	T	Orange/White	PP
168026	MPP 9-20T-02	20	12.5	235	12.5	Bell	T	Black	PA
167832	MPH 12-8T	8	14.7	118	9.5	Bell	T	Orange	PP
167833	MPH 12-12T	12	14.7	161	12.8	Bell	T	Orange	PP
167834	MPH 12-16T-01*	16	14.7	201	15.8	Bell	T	Orange	PP
167859	MPH 12-16T-02	16	14.7	201	15.8	Bell	T	Green	PA
167871	MPF 10-6T	6	14.7	115	8.9	Bell	T	Orange/White	PP
167872	MPF 10-9T	9	14.7	155	11.5	Bell	T	Orange	PP
167873	MPF 10-12T	12	14.7	182	14.0	Bell	T	Orange/White	PP
167874	MPF 21-9T-01*	9	29.3	305	97.5	Flange	T	Orange/White	PP
167875	MPF 21-12T	12	29.3	385	123.6	Flange	T	Orange/White	PP
167876	MPF 21-15T-01*	15	29.3	465	149.6	Flange	T/G	Orange/White	PP

\* Variations available. Please contact your local sales representative for additional information

\*\* T = Stepped, D = Straight, L = Luer, G = Threaded

## STATOMIX ME/MS SERIES

# STATIC MIXERS WITH HELICAL TECHNOLOGY


MIXPAC Statomix ME/MS static mixer portfolio provides an efficient and reliable solution for 2-component mixing to be used with meter mix dispense (MMD) equipment:

- Universally applicable to high and low viscosities
- Available with two different inlet diameters to fit most meter mix dispense systems
- Helical mixing element made from POM for increased stability
- Disposable mixers eliminate costly cleaning procedures and decrease equipment downtime

For safety reasons, Statomix ME/MS static mixers must be used with shrouds.




### STATOMIX ME SERIES

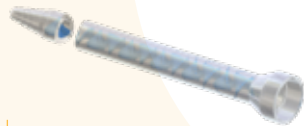

Inner diameter of the bell inlet housing: 15.9 mm / 0.625 inch

ID	Article	Number of Elements	Diameter Ø mm	Length Ø mm	Waste Volume (mL)	Tip Style**	Element color	Element material
102448	ME 05-24T	24	8	149	2.3	T	Blue	POM
102449	ME 05-32T	32	8	188	2.8	T	Blue	POM
102450	ME 06-24T	24	10	185	4.2	T	Blue	POM
102451	ME 06-32T	32	10	234	6.6	T	Blue	POM
102452	ME 06-48T	48	10	334	10.0	T	Blue	POM
102453	ME 08-24T	24	12	223	8.5	T	Blue	POM
102454	ME 08-32T	32	12	287	11.5	T	Blue	POM
102456	ME 10-24T	24	14	276	16.0	T	Blue	POM
102457	ME 10-32T	32	14	352	23.0	T	Blue	POM
102455	ME 1012-0832T	44	14 12	409	19.2	T	Blue	POM
102459	ME 13-24T	24	17	293	26.4	T	Blue	POM
102461	ME 13-32T	32	17	379	33.7	T	Blue	POM
102458	ME 1312-1032D	44	17 14	499	37.5	D	Blue	POM

### STATOMIX MS SERIES

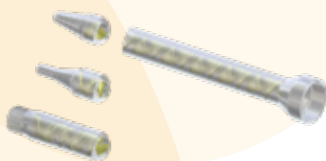

Inner diameter of the bell inlet housing: 16.7 mm / 0.657 inch

ID	Article	Number of Elements	Diameter Ø mm	Length Ø mm	Waste Volume (mL)	Tip Style**	Element color	Element material
102503	MS 05-24T	24	8	148	2.3	T	Yellow	POM
102504	MS 05-32T	32	8	188	2.8	T	Yellow	POM
162540	MS 06-18T	18	10	149	3.8	T	Yellow	POM
102505	MS 06-24T	24	10	185	4.2	T	Yellow	POM
102506	MS 06-32T	32	10	234	6.6	T	Yellow	POM
102507	MS 06-48T	48	10	334	10.0	T	Yellow	POM
102508	MS 06-56D	56	10	378	11.0	D	Yellow	POM
102509	MS 06-56L	56	10	392	11.0	L	Yellow	POM
102510	MS 08-24T	24	12	223	8.5	T	Yellow	POM
102511	MS 08-32T	32	12	287	11.5	T	Yellow	POM
102513	MS 10-18T	18	14	214	12.3	T	Yellow	POM
102514	MS 10-24T	24	14	276	16.0	T	Yellow	POM
102515	MS 10-32T	32	14	352	23.0	T	Yellow	POM
102512	MS 1012-0832T	44	14 12	409	19.0	T	Yellow	POM
102517	MS 13-18G	18	17	223	21.6	G	Yellow	POM
102518	MS 13-24T	24	17	293	27.0	T	Yellow	POM
102522	MS 13-32G-01	32	17	373	34.5	G	Yellow	POM
102520	MS 13-32T	32	17	379	34.5	T	Yellow	POM
102516	MS 1312-1032D	44	17 14	494	37.5	D	Yellow	POM

\*\* T = Stepped, D = Straight, L = Luer, G = Threaded


## STATOMIX MSR SERIES

# STATIC ROTARY HELICAL MIXERS

MIXPAC Statomix MSR rotary mixers are specifically designed to be used with dynamic meter mix dispense equipment, used for hard to mix low viscosity adhesives and sealants:


- Highly effective for mixing of components with high viscosity difference
- Disposable mixers eliminate costly cleaning procedures and decrease equipment downtime
- Rotary mixing process enables superior mixing quality with a reduced number of mixing elements
- Mixer length up to 70% shorter versus static mixers also results in significant material waste reduction and an increase in process efficiency.
- Helical mixing element made from Acetal (POM) for increased stability

Mixer housing available in 4 diameters to work with different viscosity materials

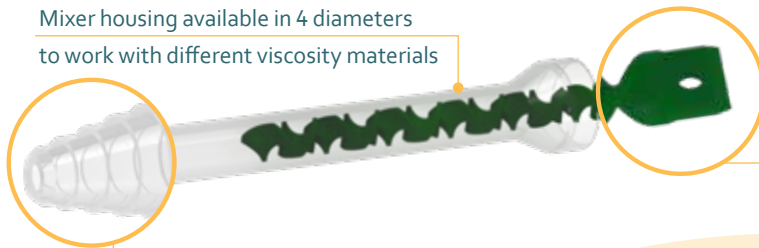

Hole to attach the MSR mixers to the dynamic mixing equipment

Stepped tip outlet\* allowing variation of the outlet diameter

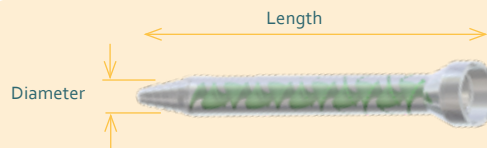

## STATOMIX MSR SERIES



Inner diameter of the bell inlet housing:  
16.7 mm / 0.657 inch

ID	Article	Number of Elements	Diameter* Ø mm	Length Ø mm	Waste Volume (mL)	Tip Style**	Element color	Element material
102499	MSR 06-12T	12	10	111	4.1	T	Green	POM
102500	MSR 08-12T	12	12	130	6.1	T	Green	POM
102501	MSR 10-12T	12	14	155	9.9	T	Green	POM
102502	MSR 13-12T	12	17	197	18.1	T	Green	POM

\* Dimensions are nominal values


\*\* T = Stepped, D = Straight, L = Luer, G = Threaded

## STATOMIX SHROUDS AND ACCESSORIES

High pressures associated with dispensing equipment require the use of shrouds:

- Available for MS, ME, and MPH Series Machine Mixers
- Prevent the mixer housing from expanding
- Ensure an optimal mixing quality and safe operation
- Made from anodized aluminum and is reusable
- Ensures precise tip alignment to the point of application

Luer lock adapters, made from PBT, can be installed onto the stepped tips of the mixers enabling the usage of Luer needle tips or other accessories for your applications.

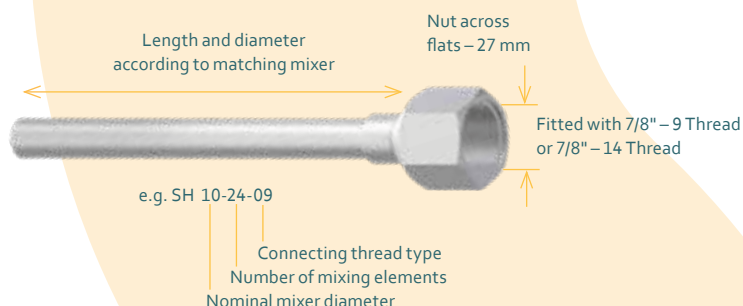



## WHO WE ARE

Headquartered in Switzerland, the medmix group is a renowned producer of all-in-one application systems for the adhesives industry. We have a strong background and offer expertise in engineering and manufacturing of cartridges, mixers and dispensers for the adhesive and sealant industry.

Our approach: committed people, operational excellence and a consistent stimulating partnership with our customers is what has led us to guarantee first class quality throughout the value chain. These principles make it possible to provide cutting edge technologies and services to many industries worldwide; this is what we hold on to!

Our long standing innovative experience has paved the way for both us and our customers to bring value added solutions, propriety technologies, sustainable leadership and additional market opportunities. By applying lean principles throughout the process, we strive to exceed customer expectations resulting in smart applications, easy to use products with high performance, long shelf life and sustainability.

Specialized applications or customized mixer and accessory solutions may be available upon request. Please contact your sales representative.

# DELIVERING INNOVATION. INSPIRING CONFIDENCE.

## EUROPE

### medmix Switzerland AG

Ruetistrasse 7  
9469 Haag, Switzerland  
Phone +41 81 414 70 00  
sales.industry@medmix.com  
www.medmix.swiss

## USA, SOUTH AMERICA, CANADA AND MEXICO

### medmix US Inc.

8 Willow St.  
Salem, NH 03079, USA  
Phone +1 603 893 2727  
sales.industry@medmix.com  
www.medmix.swiss

## UK AND IRELAND

### medmix UK Ltd.

1 Tealgate, Charnham Park, Hungerford  
Berkshire, RG17 0YT, United Kingdom  
Phone: +44 (0)1488 647 800  
sales.industry@medmix.com  
www.coxdispensers.com

## SPAIN

### medmix Spain S.A.

Calle No. Díez, 22  
ES 46470 Albal (Valencia)  
Phone +34 96 276 31 99  
sales.spain@medmix.com  
www.medmix.swiss

## ASIA PACIFIC

### medmix China Ltd.

68 Bei Dou Lu, Minhang Shanghai  
200245, China  
Phone: +86 21 6430 68 68  
sales.industry@medmix.com  
www.medmix.swiss



Legal Notice: This brochure is a general presentation. The information contained in this publication is believed to be accurate and reliable but is not to be construed as implying any warranty or guarantee of performance. We waive any liability and indemnity for effects resulting from its application. Please, contact us for a description of the warranties and guarantees offered with our products. Directions for use and safety will be given separately. All information herein is subject to change without notice.

© 2023 medmix Switzerland AG All rights reserved.

medmix is a trademark belonging to medmix AG, and MIXPAC is a trademark belonging to medmix Switzerland AG.